


SAR Size Chart

Sizing Information

→ There’s some flexibility due to the cummerbund’s elastic stretch. Plate thickness used for testing: about 0.2 in and 0.8 in. Thicker plates will slightly affect fit. If your waist is wider than your chest, use your waist measurement for the best size estimate.

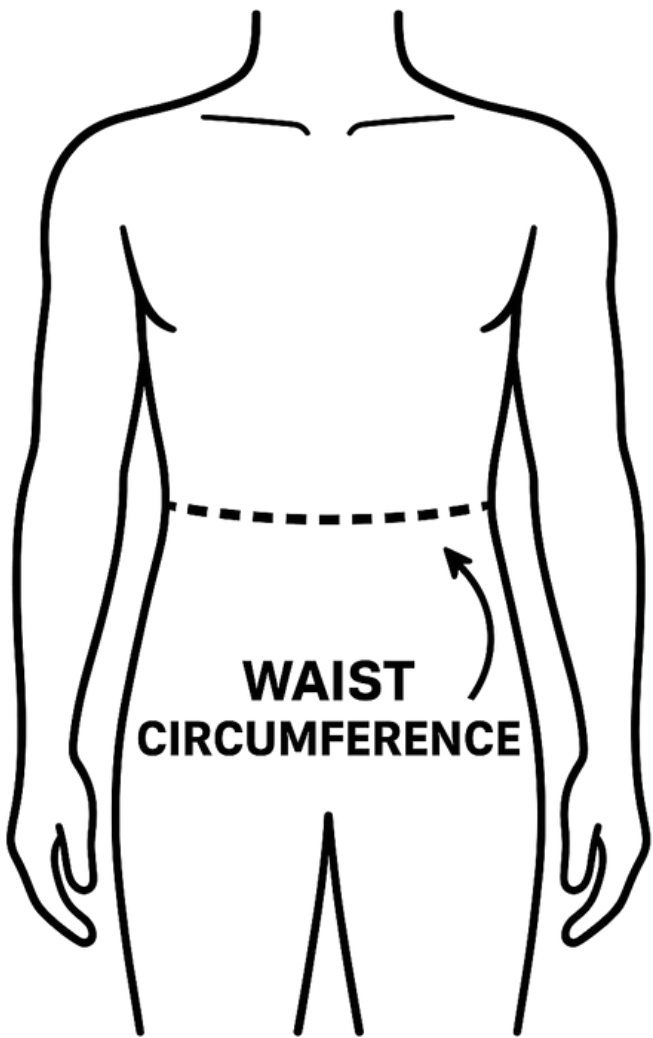

	WAIST CIRCUMFERENCE (WITHOUT PLATES)	WITH SOFT ARMOR	WITH SOFT + HARD ARMOR
M	39–49 IN	35–47 IN	31–45 IN
L	43–53 IN	39–51 IN	35–49 IN
XL	47–57 IN	43–55 IN	39–53 IN